GSM/GPRS/GPS
Vehicle Tracker Device
User Manual

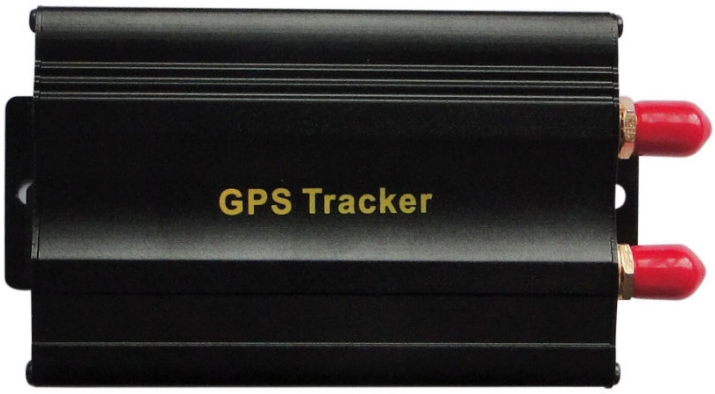

Preface

Thank you for purchasing our GPS tracker device. This manual shows how to use the product smoothly and correctly. Before using the product, please read this manual carefully. Please note that specification and information are subject to changes without prior notice in this manual. Any change will be integrated in the latest release. The manufacturer assumes no responsibility for any error or omission in this manual.

Content

I. Function Introduction....3
1. Main Features....3
2. Applications....3
4. Accessories....4
5. Specifications....5
6. SIM CARD Installations....6
7. TF CARD Installations....6
8. Install the device into the vehicle....7
9. Turn on the Tracker Device....8
II. Tracker Device Operating Mode....8
III.Basic functions....9
1. SMS Command Format....9
2. SMS Command List....10
3. SMS Command/Response/Notification/Alarm explanation by Functions....13
1) Initialization....13
2) Change Password....13
3) Authorization:....13
4) Locating:....14
5) Real Time Voice Monitoring....15
6) Offline Voice Recording:....15
7) IMEI Check:....15
8) Timezone Setting:....16
9) Geo-fence:....16
10) Moving Alarm....16
11) Overspeed Alarm....17
12) Cut off the Oil and Power System....17
13) Resume the Oil and Power System....17
14) Arming....18
15) Shacking Alarm....18
16) Tracking Trace Recording....18
17) Check the Device's Working Status....19
18) Check The Device's Config Information....20
19) External power supply cut off alarm....21
20) SOS Alarm....21
21) APN setting for GPRS network access....21
22) IP and Port Setup for GPRS network access....22
23) Connect to the Monitor Server....22
24) GSM Base Station Positioning....23
25) Get Street Address....23
26) Siren Setup....24
4. Tracker Device Hardware Reset:....24
5. Function Of Remote Controller:....24
IV.Alarms....25
1. Lower Power Alarm....26
2. External power supply cut off alarm....26
3. SOS....26
4. Door Alarm....26
5. Shock Sensor alarm....27
6. ACC alarm....27
7. Move alarm....27
8. Geo-fence alarm....28
9. Speed Alarm....28
10. Lack SD card space Alarm....28
11. Power Off Alarm....29
V. LED indicator status....29
VI.Operation Suggestions....29
VII.Common Faults & Solutions....30

The professional Global GPS Tracking device manufacturers.
WWW.RXTCOM.COM

I. Function Introduction

This tracker is a new product based on GSM/GPRS network and GPS satellite positioning system. It has multiple functions, such as positioning, tracking, monitoring and alarms for security. User can easily track and monitor vehicles or other moving targets by mobile phone or Internet-connected computer.

1. Main Features

1) Support A-GPS / GPS / base station positioning.
2) Support SMS/GPRS/Internet Network data transfer. (GPRS/Internet instructions in CD enclosed)
3) Support point-to-point, point-to-group, group-to-group monitoring.
4) Support single positioning and continuous location tracking.
5) Support voice monitoring and recording. (SD card required)
6) Supports historical traveling locus uploading. (SD card required)
7) Support Vehicle Anti-theft alarming. (Remote control setup/Cancel)
8) Support electronic fence alarm, door open alarm, ACC alarm, moving alarm, speeding alarm, SOS alarm and other kinds of emergency alarms.
9) Support alarm for equipment malicious removal.
10) Built-in vibration sensor; external temperature and humidity sensor be supported.

2. Applications

This product is widely used for vehicle and other moving objects, especially for personal cars, company/government vehicles, taxies and motorcycles.

3. Hardware Description

The tracker device hardware interface diagram is shown as below:

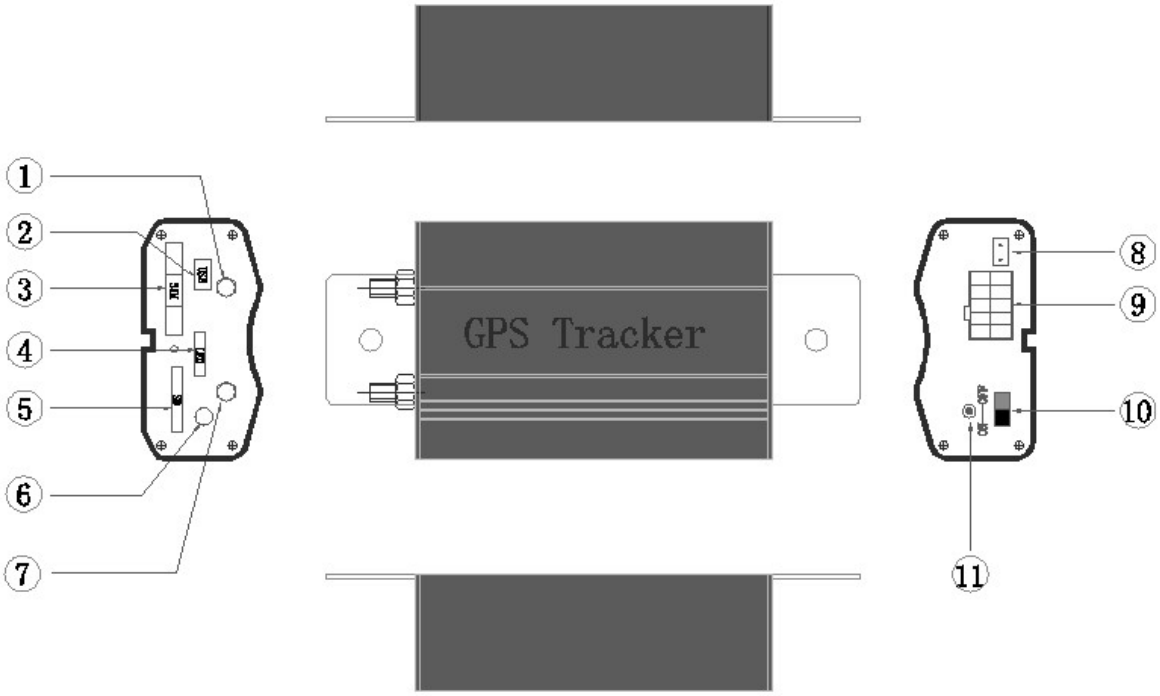

01. GPS Antenna connector
02. Mini USB slot
03. SIM Card slot Pop-up switch
04. Power/GSM/GPS LED indicator
05. Micro SD Card (SD) slot
06. Monitor jack (J3)
07. GSM Antenna connector
08. Temperature sensor jack (J1)
09. 10Pin Harness (J2)
10. Backup battery switch
11. Remote controller antenna window

4. Accessories

NO	PHOTOES	NAME	NOTE
1		GPS Antenna	3 meters

2		GSM Antenna	3 meters
3		Microphone	1.5 meters
4		Harness	10PIN
5	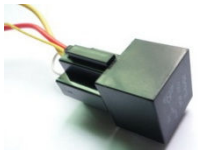	Relay	12V/40A or 24V/40A according to vehicles
6		Remote control	15 meters control
7		USB Cable	0.8 meters
8		Siren	Option
9	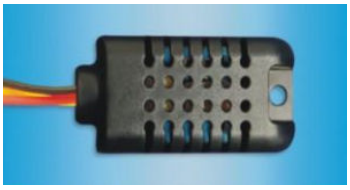	Temperature and humidity sensor	Option

5. Specifications

Content	specifications
SIZE	83*54*26mm
Weight	120g
Network	GSM/GPRS
Locating Method	A-GPS/GPS/GPRS
GSM Band	850/900/1800/1900 MHz
GSM Sensitivity	-105dBm

GPS Module	UBLOX
GPS Sensitivity	-159dBm
GPS Accuracy	5m
GPS Start-up time (Antenna opensky)	Cold start-up time: 27s Warm start-up time: 27s Hot start-up time: 1s
Voltage of power system	12 V -24V
Backup battery	Chargeable 3.7V 800mAh Li-ion battery
Storage Temp.	-40°C to +85°C
Operation Temp.	-20°C to +65°C
Humidity	5%--95% non-condensing

6. SIM CARD Installations

Installation Steps:

Use a tweezers or other sharp things to press the SIM CARD popup switch;
Take out the SIM card slot after it is popped up;
Put SIM card into the SIM card slot and insert it back to its original position after confirming the SIM card at the right place.

Attentions:

- Please don't insert, change or remove SIM card when the tracker device is working. If you need to this, please confirm that the device is power off.
- Please check SIM card and make sure that incoming calls display is available, call transfer is forbidden and the PIN code is locked.
- The SMS must be TXT format; The PDU format will not be supported by device.
- Please ensure that GPRS function of your SIM card is available. The GSM base station location and the communication between the tracking software/server and the device need to be supported by GPRS function. (If your device only work in SMS control mode, the GPRS function is unnecessary).
- The device only supports GSM network. WCDMA or other 3G SIM cards are not supported.

7. SD CARD Installations

Installation Steps:

Insert the SD card (Micro SD card) into the corresponding card slot in the correct direction. If you need to remove the SD card from the device, just press the SD card and it will be popped up automatically.

Attentions:

- Please don't insert or remove the SD card when the device working. If you need do this, please confirm that the device is power off.
- Maximum capacity of SD card is up to 32GB;
- In order to read the data in SD card, you can connect the device to the computer with the USB cable. You can also remove the SD card when the device is power off, and

use a SD card reader.

8. Install the device into the vehicle

The hardware interface with the car/external harness is shown as below:

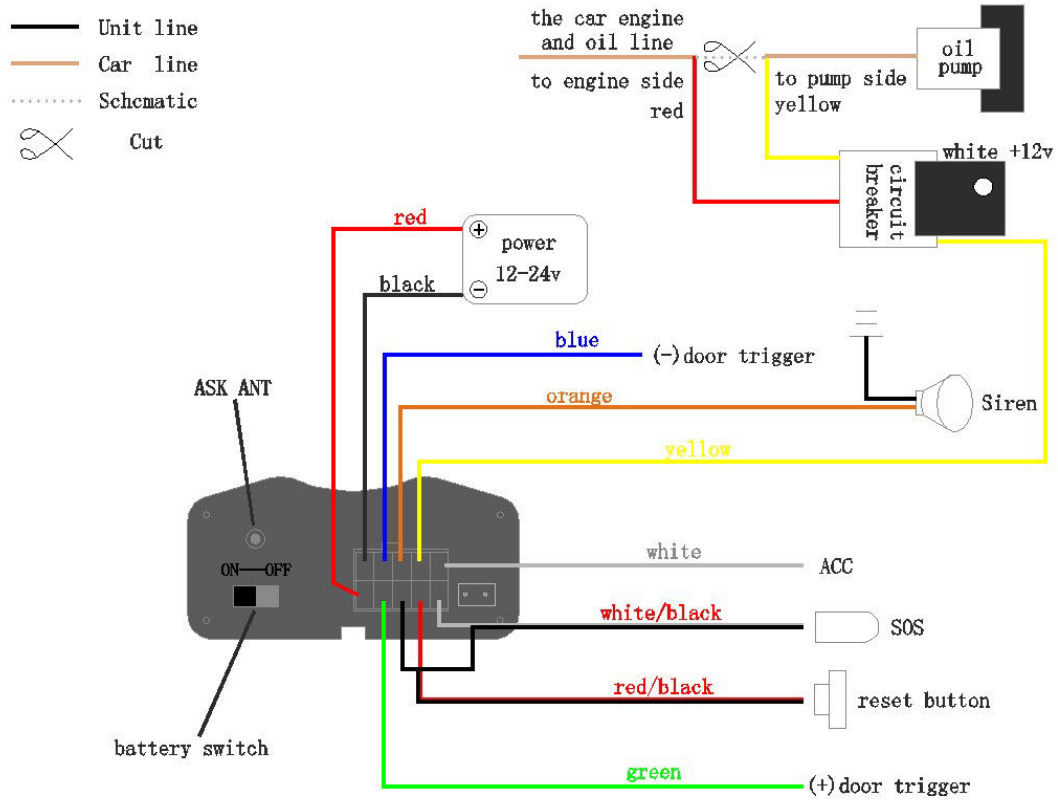

Diagram of connection:

1. Put the device into the proper position inside the car.

Attentions:

Identify the trigger type of your car (Positive or negative trigger). For vehicle with positive trigger, Please keep the device isolated from the vehicle frame. Otherwise, the device and the battery of your car may be damaged.

2. Find the 10 PIN harness and connect wires with the original car circuits as following step. Please refer to connection diagram as below.

Reference to the diagram, the installation procedure as following:

a) Connect POWER&GND wire to car battery. The red wire is connected to positive terminal of car battery; the black wire is connected to negative terminal of car battery.

b) Identify the type of the door trigger (positive trigger or negative trigger).

When the door trigger is negative trigger:

Harness Door+ pin connect to the car battery Power;

Harness Door- pin connects to the door control circuit;

When the door trigger is positive trigger:

Harness Door+ pin connect to the door control circuit;

Harness Door- pin connects to the car battery ground;

c) Connect the white wire to the vehicle Car ACC ignition switch.

d) Placed the automotive relay socket to the proper position inside the hood of the car; Find the car's original engine cable and cut it off. Connect the engine side of the original cable to the thick red cable of the relay socket; Connect the oil pump side of the original cable to the thick yellow cable of the relay socket.

Attentions:

- The white thin cable of the relay socket should be connected to the car supply power and we have connected the thin white cable to the red thick cable already. (For original vehicle usage, that's ok.)
- We have connected the yellow cable of the 10 PIN harness to the automotive relay already.
- The joints must have good insulation protection.

e) Connect the orange wire to the siren you bought. (Siren is Option).

3. Put the Reset button and SOS button to the place where the driver could touch conveniently.
4. Connect the GPS antenna and GSM antenna to the corresponding connectors; Find appropriate places to fix the two antennas and make sure they receive signals well. The GPS Antenna must be exposed to the air and have no metal obstruction.
5. Insert the Temperature and humidity sensors plug into the jack (J1). (Sensor is Option).
6. If you need read data in the SD card or update device firmware, connect the USB cable to the mini-USB interface. (Please refer to the firmware instructions in the CD.)

Attentions:

- Please ask the qualified engineers to install the device.
- Do not install the device when GSM/GPS signal is in poor condition.
- Place the antennas in appropriate positions with good signals.
- Prevent the device from water and dust.

9. Turn on the Tracker Device

Turn on the backup battery switch, then insert 10 PIN harness into the 10 PIN jack (J2). The tracker device will work normally after 3~5 minutes.

II. Tracker Device Operating Mode

The device has two operating modes:

1. SMS Monitoring Mode

SMS monitoring mode is the device's default monitoring mode. User could use the authorized telephones as a master, control/monitor the device by sending SMS text messages. We mainly discuss this mode in this manual.

2. GPRS Tracking Mode

With an Internet-connected computer, user could also use a professional PC software

The professional Global GPS Tracking device manufacturers.
WWW.RXTCOM.COM

or service platform to control/monitor the device. This mode is called the GPRS monitoring mode. Before using this mode, some related internet parameters should be set firstly through the SMS monitoring mode. How to use the GPRS tracking mode is beyond the scope of this manual. We only introduce the related GPRS parameter setting in the following chapters.

III. Basic functions

1. SMS Command Format

（Attention：The "+" in all following commands means there is a blank space here in the short message，please do not type a real "+" character on your cell phone.）

SMS is an important communicating way between a user and a device. Users could send SMS messages through authorized mobile phones to control and monitor devices; Devices could also send messages to the user's authorized mobile phones, to reply to the user's instructions, report the relevant information of the vehicles, or perform one alarm.

Four Types of SMS messages are supported in this device:

- **SMS Command**, sent by the master to control the device or change some configuration.
- **SMS Response**, reported by the device as a synchronous response to a SMS command.
- **SMS Notification**, reported by the device as an asynchronous response to a SMS command ;
- **SMS Alarm**, reported by the device when detecting one alarm or several alarms.

(Attention: The device will not give any response to an illegal SMS message.)

SMS Command

A SMS command is used by the user to do some control action or change some configuration of the device.

The command has two common formats as following:

For a command with parameter(s):

[cmd]+[pswd]+[space]+[parameter(s)…]

for a command without a parameter:

[cmd]+[pswd]

in which:

- [cmd]: indicating the name of the command, and
- [pswd]: indicating the password, and
- [parameter(s)]: indicating the parameter(s) taken by the command.

For a command, [cmd] and [pswd] are indispensable, but the number of parameters is dependent on the command.

The default password is 123456.

The professional Global GPS Tracking device manufacturers.
WWW.RXTCOM.COM

SMS response

Upon the receipt of a SMS command, the device will respond a synchronous response. The SMS response has a common format as following:

[command]: [result]
[timestamp]

In which:

- [command]: indicating the command sent by the user, and
- [result]: indicating the result of the command implementation, and
- [timestamp]: indicating the time point of the implementation.

And the [result] may be:

- “ok”, if the command is executed, or
- “password error”, if the given password is incorrect, or,
- “format error”, if the given parameter is incorrect, or,
- “error” followed by a detailed description of the error, if the device failed to execute the command.

SMS Notification

Besides the synchronous response, the device may respond asynchronous notifications and tell the final execution result of a command. The asynchronous notifications have a common format as following:

[notification]
[timestamp]

In which:

- [notification]: indicating the content of this notification, and,
- [timestamp]: indicating the time point at which the notification was sent.

SMS Alarm

A SMS alarm is used to tell the master some abnormal status of the device. The alarms have a common format as following:

[alarm indicaion]
Lat:[lat] Lon:[lon]
Speed:[spd] Alt:[alt]
[timestamp]

in which:

- [alarm indication]: indicating what alarm it is, and
- [lat]: indicating the latitude of the place where the alarm is triggered, and
- [lon]: indicating the longitude of the place where the alarm is triggered, and
- [spd]: indicating the speed when the alarm is triggered, and
- [alt]:: indicating the height of the place where the alarm is triggered, and
- [timestamp]: indicating the time point at which this alarm is triggered.

Please refer to next chapters for further details.

2. SMS Command List

In the following command list:

- All commands are case-insensitive；

Command Format	Command Example	Command Functionality	reply
begin+[pswd]	begin123456	To initialize the configuration and reset the device.	
passwd+[pswd]+[space]+[newPswd]	passwd123456 888888	To change the password. (Old password:123456; New password:234567)	
admin+[pswd] +[space]+[adminNum]	admin123456 13800138000	To add a new master telephone number(13800138000).	
Noadmin+[pswd] +[space]+[adminNum]	noadmin123456 13800138000	To delete a master telephone number(13800138000).	
monitor+[pswd]	monitor123456	To start voice monitoring.	
tracker+[pswd]	tracker123456	To switch to the SMS Monitor mode.	
gprs+[pswd]	gprs123456	To switch to GPRS Tracking mode.	
tn+[pswd] +[space]+[interval] +[space]+ [repeats]	tn123456 120 20 tn123456 20 ***	To start locating	
notn+[pswd]	notn123456	To stop locating	
stock+[pswd] +[space]+[lat0],[lon0]+[lat1],[lon1]	stock123456 12.3456871, 118.3456123 12.3668121, 118.6012345	To set an electronic fence	
nostock+[pswd]	nostock123456	To delete the electronic fence	
move+[pswd]	move123456	To enable the moving alarm	
nomove+[pswd]	nomove123456	To disable the moving alarm	
speed+[pswd] +[space]+[spd]	speed123456 60	To enable the over speed alarm	
nospeed+[pswd]	nospeed123456	To disable the over speed alarm	
nohelp+[pswd]	nohelp123456	To mask off the currently generated SOS request.	
stop+[pswd]	stop123456	To cut off the power supply of the car	
resume+[pswd]	resume123456	To resume the power supply of the car	
arm+[pswd]	arm123456	To enable the safe guard.	
noarm+[pswd]	noarm123456	To disable the safe guard.	

check+[pswd]	check123456	To get the current status of the device.	
imei+[pswd]	imei123456	To get the IMEI of the device.	
timezone+[pswd] +[space]+[zone]	timezone123456 8	To set the timezone.	
apn+[pswd]+[apnName]+[apnUsr]+[apnPswd]	apn123456 cmnet	To set the APN.	
ip+[pswd] +[space]+[ipAddr] +[space]+[tcpPort]	ip123456 192.168.100.1 9000	To set the IP address and TCP port of the PC-Monitoring tool.	
noip+[pswd]	noip123456	To reset the IP address and the TCP port of the PC-Monitoring tool.	
audrec+[pswd] +[space]+[period]	audrec123456 10	To start audio recording.	
noaudrec+[pswd]	noaudrec123456	To stop audio recording.	
nospeaker+[pswd]	nospeaker123456	To disable the speaker.	
pstop+[pswd]	pstop123456	To enable the power-stop alarm	
nopstop+[pswd]	nopstop123456	To disable the power-stop alarm	
shake+[pswd]+[level]	shake123456	To enable the shaking alarm	
Mask+[pswd]	mask123456	To mask off the currently generated alarm(s).	
log+[pswd]	log123456	To start logging the track of the device.	
nolog+[pswd]	nolog123456	To stop logging the track of the device.	
address+[pswd]	address123456	To get the address of the device.	
Silent+[pswd]	Silent123456	To stop the buzzer.	
humget+[pswd]	humget123456	Get the Humidity	
humset+[pswd] +[space]+[humVal] -	humset123456 20	Set Humidity alarm	
Tempget+[pswd]	tempget123456	Get the Temperature	
Tempget +[pswd] +[space]+[humVal] -	tempset123456 20	Set Temperature alarm	
Loud+[pswd]	Loud123456	To start the buzzer.	
Config+[pswd]	Config123456	Check device setup parameter	

The professional Global GPS Tracking device manufacturers.
WWW.RXTCOM.COM

3. SMS Command/Response/Notification/Alarm explanation by Functions

To explain the usage of the SMS message, this chapter will show how to use the above short message functions one by one.

Attention : No quotation marks when sending all the SMS.

1) Initialization

User should initialize the device before using it. This command is to set all configurations to the default values.

Command: Send the command SMS “begin+password” to the device, it will reply “begin ok” and initialize all the settings to default factory settings.

Example: Send SMS “begin 123456”, it will reply “begin ok”.

（Default password: 123456）

2) Change Password

User could change the default password (123456) to a new one.

Command: Send SMS “password+old password+space+new password” to the device to change the password.

Example: Send SMS “password123456 888888” to the tracker device, it will reply “password ok with:888888” and change the password.

Attentions:

- Be sure to keep the new password in mind, you have to upload the firmware to restore the original setting in case of losing the new password.
- Make sure the new password is in 6 digits Arabic numbers. Other characters are not recognized by the device.

3) Authorization:

Authorization phone number is a phone number you used for tracking, controlling, alarms, etc. At most 5 phone numbers is allowed to be authorized for the tracker device. When an alarm is triggered, the device will only sends alarm SMS to the authorized telephone numbers.

Add masters:

Add authorization as following two ways:

- For the first authorization, call and track the device successfully for 10 times from a mobile phone, the device will set this phone number as an authorized number automatically, and reply a SMS “add master ok”.
- After the first authorization, the other authorized numbers should be set by the first authorized phone. Sending a SMS “admin+password+space+mobile phone number” to set an authorized number, if the number is successfully authorized, the device will reply “admin OK with authorized number”.

Example: Send SMS “admin123456 13800138000” to the tracker device, it will reply “admin ok” and the number13800138000 will be set up as a new

authorized number.

If the user needs to track a target device when it's in another country, you must add your own country code before the cell phone number when executing the authorization.

Example: send SMS "admin123456 008613800138000" to the device. Here 0086 is China's country code.

Delete authorization:

Command: Send SMS "noadmin+password+authorized number" to delete the authorized number.

Example: Send SMS "noadmin123456 13800138000"to delete the authorized number 13800138000。

4) Locating:

Single Locating:

If none authorized number has been set, the device will reply a SMS including the position of latitude and longitude when any number dial-up it . Once the first authorized number has been set successfully, the device will only reply SMS to the authorized numbers. Dialing the tracker device from an authorized number, the device will hang up your calling and then send back a SMS to the authorized number including the real-time latitude and longitude information as following:

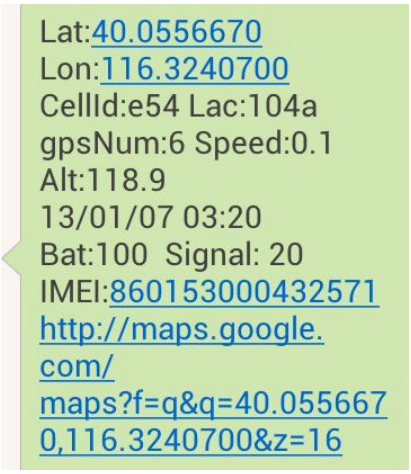

Lat/Lon: The device Current coordinate position.

CellID/Lac: GSM network, the base station location information.

Locating: When GPS Number of Star Search is less than 4, GPS displays the coordinates of the location may not be accurate.

Speed: Show The current moving speed of.

Alt: 118.9 indicating the location Altitude.

Imei: Device ID number.

Imei: Device ID number.

Link: Through the mobile browser, view the GPS location map.

Auto track continuously:

Command: Send SMS command "tn+password+space+timing interval+ space+Locating times" to the tracker device.

Example: Send SMS "tn123456 030 005"to the device. It will report the Geo-info for 5 times each 30s intervals; Send SMS "tn 123456 030 ***" to the tracker device, it will reply the Geo-info continuously at 30 seconds intervals.

Cancellation: Send SMS "notn+password" to the tracker device to cancel the "auto track".

Example: Send SMS "notn123456" to the tracker device. to cancel the "auto track".

Attentions:

The timing interval device should be second, range should be 30s~86400s;

5) Real Time Voice Monitoring

Enter Real Time Voice Monitor State：

Command: Send SMS "monitor +password" to the tracker device, it will enter the voice monitoring state, the device will reply "monitor ok". In this state the user could monitor the device's environment sound/voice. After the device enters this state, when the users call the device using an authorized telephone, the device will no longer hang up the call or reply a short message including the real-time latitude and longitude information as usual, but connect the call from the phone. In this way the user could monitor the device environment sound/voice.

Attention: In voice monitoring state, the device could receive and response to user's SMS command, but could not report alarms actively.

Example: Send SMS "monitor123456", the terminal will reply "monitor ok".

Quit Real Time Voice Monitor State：

Command: Send SMS command "tracker+password" to tracker device, it will reply "tracker ok", quit the voice monitor state, and go back to normal SMS control mode. That means, when the user calls the device using an authorized telephone, the device will hang up the call and reply a short message including the real-time latitude and longitude information as usual.

Example: send SMS "tracker123456", the terminal will reply "tracker ok".

6) Offline Voice Recording:

Start offline voice recording:

Command: Send SMS "audrec+password+space+time" to tracker device to setup device sound recording.

Example: Send SMS command "audrec123456 20". If succeeded, the device will reply "audrec ok with 20minute". Then it will start to record environment sound/voice for 20minutes.

Attentions:

- **SD Card must be installed for this function. If not SD CARD in, the device will reply "error for SD card unavailable or insufficient SD card memory."**
- **The time device is minute, the maximum value is 120.**
- **The recorded audio file will be AMR format and stored in the SD card directory "T\tk203b\audRec".**
- **The recording will stop automatically when the current command execution is finish.**

Stop offline voice recording immediately:

Command: Send SMS to tracker device "noaudrec+password" to stop device offline voice recording immediately.

Example: Send SMS command "noaudrec123456".

7) IMEI Check:

Check Tracker Device IMEI number:

Command: Send SMS command "imei+password" to the device.

Example: Send SMS command "imei123456" to the tracker device,.

Response: An IMEI number in 15 digits will reply to your cell phone in SMS.

8) Timezone Setting:

Setup a Time zone:

Command: Send SMS command "timezone+password+space+zone" to set the timezone. If no timezone is set, the timestamp used in SMS will be in Greenwich Mean Time. [zone] should be times of 0.5, with the value interval [-12.0 ~ +12.0].

Example: Send command SMS "timezone123456 8", 8 is Chinese time zone. , The tracker device will reply "timezone: ok with 8"。

Attention: If your country time zone is minus, send SMS "time zone123456 -8", the tracker device will reply "timezone: ok with -8"。

9) Geo-fence:

This command is to set an electronical fence. If this command has been set, an alarm will be reported to user when the device is out of the fence.

Setup a Geo-fence:

Command: The user can send SMS "stock+password+space+lat0,long0+space+lat1,long1" to the tracker device to set the restricted district. [lat0] and [lon0] indicate the latitude and longitude of the start point (the top left corner of the Geo-fence) respectively, and [lat1] and [lon1] indicate the latitude and longitude of the end point (the bottom right corner of the Geo-fence) respectively.

Alarm: When the terminal moves out of the fence, the tracker device will send a SMS "stock +current Geo-info" to the authorized telephone numbers in 3 minutes interval repeatedly.

Example: Send a SMS "Stock123456 22.11,113.11 25.11,115.11"to the tracker device. If the terminal moves out of the fence, the tracker device will reply a SMS "stockad alarm lat:22.55334 log:113.903418"。

Attentions:

- **The first latitude & longitude is coordinate of the top left corner of the Geo-fence, while the second latitude & longitude is the coordinate of the bottom right corner;**
- **The alarm will repeat in 3 minutes interval when triggered.**
- **This command is recommended to set when the device stays immobile in a place.**
- **If this command is received when an electronic fence was already set, the new fence will replace the old one.**

Cancel a setting Geo-fence:

Command: Send SMS "nostock+password" to deactivate this function.

10) Moving Alarm

Setup moving alarm:

Command: When the vehicle stays immobile in a place and the engine is off, the user could send a SMS "move+password" to the tracker device to setup a moving alarm. The command can only take effect only when the car engine is off and the device can get the precise latitude and longitude of the current

The professional Global GPS Tracking device manufacturers.
WWW.RXTCOM.COM

position.

Example: Send SMS command "move123456" to the tracker device,.

Responses: The device will reply “move OK” to indicate move alarm setting successfully. Other possible error responses are

- “move : error for no master set.”
- “move : error for engine is on.”
- “move : error for current position is not accurate.”

Alarm: In case of such a movement (the default distance is 200m), the device will send an alarm SMS “Move + current Geo-info” to the authorized numbers in 3 minutes interval repeatedly.

Cancel moving alarm:

Command: Send SMS “nomove+password” to deactivate the movement alarm.

Example: Send SMS command "nomove123456" to the tracker device,.

11) Overspeed Alarm

Setup overspeed alarm

Command: Send SMS “speed+password+space+speed_limit_value” to the device to set the overspeed alarm. After the setup, the speed alarm will be triggered and reported to the user if the vehicle’s speed exceeds the speed limit. “Speed limit” in command is an integer value (60~360) with the device km/h.

Example: Send SMS “speed123456 080” to the device to set the speed limit to 80km/h.

Response: The device will reply “Speed OK with 80km/h” to indicate overspeed alarm setting successfully. Another possible error response is “speed: error for no master set.”

Alarm: When this command setting successfully, an overspeed alarm will be reported if the vehicle’s speed exceeds the speed limit. When the target moves exceeding 80km/h, the tracker device will send alarm SMS “speed alarm+080+Geo-info” to the authorized telephone numbers.

Cancel overspeed alarm

Command: Send SMS “nospeed+password” to deactivate the overspeed alarm.

Example: Send SMS command "nospeed123456" to the tracker device,.

12) Cut off the Oil and Power System

Setup Cut The Car Oil Power:

Command: Send SMS command “stop+password” to the tracker device. This command is to cut off the power-supply of the car, but it will not take effect if the device’s speed is higher than 60 km/h for safety guarantee.

Example: Send SMS command "stop123456" to the tracker device,.

Response: The device will reply “Stop ok” to your cell phone and stop your car engine at the same time. It will remain the immobile state until receiving the next “resume+password” command.

Another possible error response is “stop : error for no master set.

13) Resume the Oil and Power System

Resume The Car Oil Power:

Command: Send SMS command “resume+password” to the tracker device.

This command is to resume the power-supply of the car.
Example: Send SMS command "resume123456" to the tracker device,.
Response: The device will reply “Resume ok” and resume your car engine at the same time.

14) Arming

Setup Arming:

Command: Send SMS command “arm+password” to the tracker device. This command is used to enable the safe guard function and could only take effect when the car engine is off (ACC voltage is low) and the door of the car is closed. When the safe guard is set successfully, engine-on alarm, door-open alarm, car-shaking alarm and the car-moving alarm will be enabled automatically.
Response: The device will reply “arm ok”. Other possible error **responses:**
“arm : error for no master set.”
“arm : error for the ACC is on.”
Example: Send SMS command "arm123456" to the tracker device,.

Cancel Arming:

Command: Send SMS command "noarm+password" to the tracker device to disable the arming state. This command is used to disable the safe guard function. When the safe guard is turned off, engine-on alarm, door-open alarm, car-shaking alarm and the car-moving alarm will be disabled automatically unless these alarms were enabled by other related commands.
Example: Send SMS command "noarm123456" to the tracker device,.
Response: The device will reply “noarm ok” .

15) Shacking Alarm

The device has built-in vibration sensor. The vibration sensor has three shacking alarm levels: high, medium and low.

Enable Shacking Alarm:

Command: Send command SMS: "shake+password+space+level to the tracker device to enable the Shacking Alarm. The level could be 1/2/3 (refers to high/medium/low) and the default level is 2.
Response: The device will reply " shake ok with 2 " and open the shacking alarm.
Example: Send SMS “shake123456 2” to the device to open shacking alarm and set vibration level to Medium.

Disable Shacking Alarm

Command: Send SMS: "shake + password +0" to the tracker device to disable the Shacking Alarm.
Example: Send SMS command "shake123456 0" to the tracker device.
Response: The device will reply " shake ok with 0 " and disable the shacking alarm.

16) Tracking Trace Recording

To realize this function must be installed SD card.

The professional Global GPS Tracking device manufacturers.
WWW.RXTCOM.COM

Enable tracking trace recording:

Command: Send SMS "log + password" to the device to start tracking trace recording. The tracking trace record will be stored in the SD card in KML format.

Response: The device will reply "log ok" and start to record the tracking trace of the device in the SD card. Other possible error responses are:

"log : error for no master set."

"log : error for sd log unavailable, or is already in logging."

Example: Send SMS "log123456" to the device, if success, the device will reply "log ok" and start to store the tracking trace into the SD card directory (T:\tk203b\trace_kml\). With this feature, user could observe the tracking trace of the vehicle when necessary.

Disable tracking trace recording:

Command: Send SMS "nolog + password" to the device. This command will stop the recording for the tracking trace.

Example: Send SMS command "nolog123456" to the tracker device,.

Response: The device will reply "nolog ok" to stop the recording. Other possible error responses:

"nolog : error for no master set."

"nolog : error for no sd log to stop."

Example: Send SMS "nolog 123456" to cancel the track record.

17) Check the Device's Working Status

Command: Send command "check + password" to the device. This command is to acquire the status of the device.

Example: Send "check123456" to the device.

Response: The device will reply a response SMS to report the tracker device status with the following format:

Mode: [mode]
GpsNum: [gpsNum]
Bat: [batVol]
Sd: [sdVol]
Power: [powerSupplyStatus]
Acc: [accStatus]
Door: [doorStatus]
Relay:[relayStatus]
Shake:[shakeVol]
Siren:[siren status]

In which:

[mode]: indicating the current monitoring mode, and

[gpsNum]: indicating the current number of the available GPS satellites, and

[batVol]: indicating the remaining volume of the backup battery in percentage, and

[sdVol]: indicating the remaining volume of the SD card in MB, and

The professional Global GPS Tracking device manufacturers.
WWW.RXTCOM.COM

[accStatus]: indicating whether the engine is on, with a possible value of "on" or "off", and
[doorStatus]: indicating whether the door is open, with a possible value of "open" or "closed".
[relayStatus]:indicating whether the relay is on, with a possible value of "on" or "off", and
[shakeVol]:indicating the vibration level of the sensor.
[Siren Status]: indicating whether the siren is on, with a possible value of "on" or "off", and

Another possible error response:

"check : error for no master set."

18) Check The Device's Config Information

Command: Send command "config + password" to the device to acquire the config information of the device.
Example: Send SMS command "config123456" to the tracker device,.
Response: The device will reply a response SMS to report the tracker device config information with the following format:

alaCfg:
[move] [arm] [speed](val) [shake](val) [pspt] [stock]
opCfg:
[Log] [relay]
[mst](number)
[apn]c(apn name)
[ip]:（val） [port]:(val)
[timezone]:(zone) [timestamp]

In which:

alaconfig: Alarm config, the alarms which have been set already will be displayed in the SMS.

[move]: If present in the SMS means moving alarm turned on now, otherwise this alarm is off now.
[arm]: If present in the SMS means Arming turned on now;
[speed] (val): If present in the SMS means overspeed alarm turned on;
[shake] (val): If present in the SMS means vibration alarm turned on;
[pspt]: If present in the SMS means external power supply alarm turned on now;
[stock] : If present in the SMS means electronic fence alarm turned on now;
[relay] : If present in the SMS means the relay was cut oil and power.
[LOG]: If present in the SMS means tracking trace record function enabled now;
[mst]: Amount of the authorized phone numbers;
[ip]: IP address;
[port]: port settings;
[timezone]: timezone, date, and time.

Example: Send "config 123456" to the device, it may reply:

alaCfg:
mv arm spd(120) shk(2)
opCfg:
log relay mst 1 apn:cmnet
ip:222.129.50.210,port:9994
timez:8.0 2012-12-20 14:36:53

19) External power supply cut off alarm

Enable External Alarm power alarm:

Command: Send command "pstop+[pswd]" to the device. This command is to enable the alarm if the 12V/24V external power supply (from the battery of the vehicle) is cut off by someone. This alarm function is disabled by default and should be enabled by user if necessary.

Example: Send command "pstop123456" to tracker device set External power supply cut off alarm.

Response: The device will reply a response SMS "pstop: ok".

Alarm: If this alarm function enabled, when the external power supply was illegally cut off, the tracker device will report an alarm SMS "power cut alarm".

Disable External Alarm power alarm:

Command: Send command "nopstop+password" to the device.

Example: Send SMS command "nopstop123456" to the tracker device.

Response: The device will reply a response SMS "nopstop: ok".

20) SOS Alarm

Long Press the SOS button of the device for 3 seconds (or press B button on the remote controller for 3 seconds), the tracker device will send SMS "help me!+lat./long. to all the authorized numbers in 3 minutes interval repeatedly. The message will be send repeatedly until any authorized number reply a SMS "no help" to the tracker device.

Example: Send SMS command "nohelp123456" to the tracker device.

21) APN setting for GPRS network access

The setting of APN (Access Point Name) is different from country to country. The detail information of APN is beyond the scope of this manual. Please contact your local GPRS network operator for more information about your local APN.

Command:

(1) Send command "apn+password+space+apnname+space+username+space+password" to the device to set the APN;

(2) If the local APN setting need no user name and password, send command "apn+password +apnname".

Response: The device will reply a response SMS "apn: ok with apnName apnUser apn pass". If user receive the error response SMS "error for having

already been connecting or connected to a Server". Please check carefully whether the settings APN username/password correct or not.

Example: send command"APN123456 general.t-mobile.uk user pass" to the device to set a UK provider T-Mobile's APN. The tracker device will reply a SMS "apn: ok with general.t-mobile.uk user pass".

Note: 123456 is terminal the password, general.t-mobile.uk is the UK provider T-Mobile APN. The user is the APN username, pass is the APN Password.

In China, for the APN setting does not require user name and password, user could send SMS "apn123456 cmnet" to device, it will reply "apn ok".

Note: cmnet is a Chinese APN name.

22) IP and Port Setup for GPRS network access

Command: Send command "ip+password+space+IP Address+space+Port Number" to set the IP address and TCP port of the PC monitoring software/server to be connected.

Response: The device will reply "ip ok with IP Address+Port Number". Another possible error response: "ip: error for already connected to server"

To reset the IP address and TCP port, Send command "noip+[pswd]".

Example: Send SMS command "ip123456 180.210.239.91 9000" to the tracker device. If succeeded, "ip OK with:180.210.239.91 9000" is returned by the device in SMS. (123456 is default password，180.210.239.91 is IP，9000 is port).

23) Connect to the Monitor Server

GPRS tracking mode login:

Command: Send SMS command " gprs + password" to order the device enter the GPRS tracking mode and connect to the monitor server. The device's default working mode is the SMS control mode. This command is to start connecting to the PC monitoring software/server and order the device change to the GPRS tracking (or called PC monitoring) mode. It requires both the APN and the IP address/TCP port configured already.

Example: Send SMS command "gprs123456" to the tracker device.

Response: The device will reply a response SMS "gprs: ok".

Attention: In this mode, the device can receive and response to a SMS command from authorized phones, but will not report any alarms to them.

Possible error responses:

"gprs : error for no apn".

"gprs : error for no ip address / tcp port"

Possible notifications:

"GPRS is not available". Please contact the network service provider to solve this problem.

"APN is invalid.". If you make sure the name, user name and password are all correct, please contact the network service provider to solve this problem.

"Failed to connect to the PC-tool, please check the config of ip and tcp port" Please make sure the PC monitoring tool is already started and ready for work,

The professional Global GPS Tracking device manufacturers.
WWW.RXTCOM.COM

and the IP address/TCP port are both correct.

GPRS tracking mode logout:

Command: Send SMS command " tracker+password" to order the device quit the tracking mode, disconnect to the GPRS monitor server and switch back to the SMS control mode.

Example: Send SMS command "tracker123456" to the tracker device.

24) GSM Base Station Positioning

When no valid GPS signal received, the tracker device will try to locate itself by GSM/GPRS network. This functionality can not work unless the SIM card is GPRS available and a valid APN has been set.

Note: This feature is available for most countries. However, it may be not available in some area, depending on the local GSM network.

25) Get Temperature and Humidity

Get the Temperature;

Command: Send command "tempget+password" to acquire the Temperature of the device.

Response: The device will reply a SMS including the Temperature.

Attention: Temperature values for degrees Celsius。

Example: Send SMS command "tempget123456" to the tracker device.get the drivereply "temp is 25".

Get the Humidity;

Command: Send command "humget+password" to acquire the Humidity of the device.

Response: The device will reply a SMS including the Humidity.

Attention: Humidity value expressed as a percentage.

Example: Send SMS command "humget123456" to the tracker device.get the drivereply "hum is 25%".

26) Set the Temperature and Humidity Alarm

Temperature alarm set;

Command: Send command "tempset+[pswd]+space+[humVal]- " to set the Temperature alarm of the device.

Response: The device will reply a SMS.

Example: send command: "tempset123456 25" to tracker device.

Temperature alarm set;

Command: Send command "humset+[pswd]+[humVal]- " to set the Humidity and Temperature alarm of the device.

Response: The device will reply a SMS.

Example: send command: "humset123456 25" to tracker device.

27) Get Street Address

Command: Send command "address + password" to acquire the address of the device.

Example: Send SMS command "address123456" to the tracker device.

Response: The device will reply a SMS including the current street address.
Attention: If the user wants to be informed of the specific location of your device now, you must set the APN first.
Example: get the drive reply "address: Anningzhuang Road, Haidian, Beijing, China.

28) Siren Setup

Force Siren Silent:

Command: Send command "silent+password" to the tracker to force the siren silent.
Example: Send SMS command "silent123456" to the tracker device.
Response: The tracker device will reply " silent: ok!" and force the siren silent. In this situation if any type of alarm is triggered, the buzzer will not tweet, but the tracker device will still send related alarm SMS to the authorized phone number.

Exit the Silent State:

Command: Send command "loud+password" to the tracker device to force the siren exit the silent state.
Example: Send SMS command "loud123456" to the tracker device.
Response: The tracker device will reply "loud ok!" and exit the silent state. When any type of alarm is triggered, the siren will tweet and at the same time tracker device will send alarm SMS to the authorized phone number.

4. Tracker Device Hardware Reset:

Reset button:
Press the reset button for 3 seconds, the tracker device will be hardware reset.

5. Function Of Remote Controller:

User can control the tracker device by remote controller. Electronic security and alarm functions are supported. Please refer to the following form.
ARM set/cancel by remote controller:
Click the A button on the remote controller, the vehicle will enter ARM status (alarm status), the buzzer will sound once, no SMS reply
Click the B key on the remote controller, the vehicle will enter the non-ARM status (non-alarm status), the buzzer will sound twice SMS reply.

States	Instructions
ARM	Press “A” button for 0.5 second, the siren will beep one time.
DISARM	Press “B” button for 0.5 second, the siren will beep two times.
Silent mode	Press “A+B” together in disarm state for 0.5 second, the siren will beep three times, siren won’t be sound after alarm is triggered, but tracker device will send alarm SMS to authorized numbers.
Quit silent mode	Press “A+B” together in disarm state for 0.5 second again, siren will beep four times. Siren will be sound after alarm is triggered. And tracker device will also send SMS alarm to authorized numbers.
Deterrence	Long press “A” button for 3 seconds, siren will be sound for 30 seconds.

The professional Global GPS Tracking device manufacturers.
WWW.RXTCOM.COM

SOS	Long press “B” button for 3 seconds, device will send SOS alert to authorized phone numbers.

IV. Alarms

An alarm indicates a problem of the device. If an alarm is enabled, it will be reported immediately at the moment of being triggered. If the problem is not solved and the alarm is neither disabled nor masked off, the alarm may be reported continuously at an interval of 3 minutes.

An alarm has a common format as following:

[alarm indication]
Lat:[lat] Lon:[lon]
Speed:[spd] Alt:[alt]
[timestamp]

in which:

[alarm indication]: indicating what this alarm is for. There may be more than one alarm indication in one alarm.
[lat]: indicating the latitude of the place at where the alarm is triggered/sent.
[lon]: indicating the longitude of the place at where the alarm is triggered/sent.
[spd]: indicating the speed when the alarm is triggered/sent.
[alt]: indicating the height of the place at where the alarm is triggered/sent.
[timestamp]: indicating when the alarm is sent.

The following table shows a list of possible alarm indications.

Alarm for	Alarm Indication	Enabled By SMS	Disabled By SMS
low battery volume	“battery alarm, bat [batVol] ”	--	--
the External supplier power supply is stopped	“power stop alarm!!”	“pstp”	“nopstp”
asking SOS	“HELP ME!!”	--	--
the door is open	“door open alarm!!”	“arm”	“noarm”
the device detecting a shaking of a certain degree	“shake alarm!!”	“arm”, “shake”	“noarm”, “noshake”
the ACC is on	“acc alarm!!”	“arm”	“noarm”
The device move alarm	“move alarm!!”	“move” “arm”	“nomove” “noarm”.
the device is out of the electronical fence	“stock alarm!!”	“stock”	“nostock”.
the device exceeds the speed limit	“speed alarm!!”	“speed”	“nospeed”
Lacking SD card space	Sd card insufficient alarm, remains [vol]MB!!	---	---
the device it to be power-off	“power off alarm!!”	--	--

1. Lower Power Alarm

Alarm indication: “battery alarm, bat [batVol]!!

Tracker device backup battery operating voltage is range of 3.3v ~ 4.2v. If the battery is less than 20%, the tracker device will send SMS “battery alarm, bat [batVol]!!” to the authorized number at 3 minutes intervals. The display of the remaining charge as a percentage of the battery.

This alarm is always enabled, and will be sent at a interval of 3 minutes until:

- the device receives command “mask”, or
- the external power supply is available, or
- the quantity of electricity of the battery is higher than 20%.

2. External power supply cut off alarm

Alarm indication: “power stop alarm!!

When the alarm is enabled, it will be triggered when the external power supply is cut off.

This alarm can be enabled when:

- the device receives command “pstop”, or
- the device is powered on with the external power supply is on;

This alarm can be disabled when:

- the device receives command “nopstop”

When the alarm is triggered, it will be sent at a interval of 3 minutes, and can be stopped when:

The device receives command “mask.

3. SOS

Alarm indication: “HELP ME!!”

This alarm is used to asking for help to all authorized users. It is always enabled, and will be triggered when:

- the user presses the SOS button for 3 seconds, or
- the user presses the B button of the remote controller for 3 seconds.

When the alarm is triggered, it will be sent at a interval of 3 minutes, and can be stopped when:

- the device receives command “nohelp”, or

The device receives command “mask”

4. Door Alarm

Alarm indication: “door open alarm!!”

This alarm is enabled when:

- the device receives command “arm”.

This alarm is disabled when:

- the device receives command “noarm”.

When the alarm is enabled, it will be triggered when:

- the door of the vehicle is opened.

When the alarm is triggered, it will be sent at an interval of 3 minutes, and can be

The professional Global GPS Tracking device manufacturers.
WWW.RXTCOM.COM

stopped when:
The device receives a command of “mask”

5. Shock Sensor alarm

Alarm indication: “shake alarm!!!”

This alarm is enabled when:

- the device receives command “arm”, if the device didn’t receive command “shake” before, and set the trigger level to 2, or
- the device receives command “shake” with a level higher than 0, and set the trigger level to the value specified in the command.

This alarm is disabled when:

- the device receives command “noarm”, if this alarm is not enabled by command “shake”, or

the device receives command “shake” with a level of 0..
When the alarm is enabled, it will be triggered when:

- the shock sensor detects a shaking with a level higher than the trigger level.

When the alarm is triggered, it will be sent at an interval of 3 minutes, and can be stopped when:

- the device receives a command of “mask”.

6. ACC alarm

Alarm indication: “acc alarm!!”

This alarm is enabled when:

- the device receives command “arm”.

This alarm is disabled when:

- the device receives command “noarm”.

When the alarm is enabled, it will be triggered when:

- the device detects the vehicle is engine-on.

When the alarm is triggered, it will be sent at an interval of 3 minutes, and can be stopped when:

- the device receives a command of “mask”, or
- the device detects the vehicle is engine-off.

Attention:

If both door alarm and acc alarm are triggered, the device will only send acc alarm.

7. Move alarm

Alarm indication: “move alarm!!”

This alarm is enabled when:

- the device receives command “arm”, or
- the device receives command “move”.

This alarm is disabled when:

- the device receives command “noarm”, or
- the device receives command “nomove”

When the alarm is enabled, it will be triggered when:

- the device detects the devices leaves the place at where the alarm is

The professional Global GPS Tracking device manufacturers.
WWW.RXTCOM.COM

enabled..

When the alarm is triggered, it will be sent at an interval of 3 minutes, and can be stopped when:

- the device receives a command of “mask”, or
- the device detects the vehicle is back to the original place.

Attention:

- If both acc alarm and move alarm are triggered, the device will only send move alarm.

Attention:

This alarm can neither be enabled nor triggered unless the GPS works well (receiving signals from more than 3 GPS satellites)

8. Geo-fence alarm

Alarm indication: “move alarm!!”

This alarm is enabled when:

- the device receives command “stock”.

This alarm is disabled when:

- the device receives command “nostock”.

When the alarm is enabled, it will be triggered when:

- the device detects the devices is out of the geo-fence.

When the alarm is triggered, it will be sent at an interval of 3 minutes, and can be stopped when:

- the device receives a command of “mask”, or
- the devices returns to the range of the geo-fence.

9. Speed Alarm

Alarm indication: “speed alarm!!”

This alarm is enabled when:

- the device receives command “speed”.

This alarm is disabled when:

- the device receives command “nospeed”.

When the alarm is enabled, it will be triggered when:

- the device is at a speed higher than the present value.

When the alarm is triggered, it will be sent at an interval of 3 minutes, and can be stopped when:

- the device receives a command of “mask”, or
- the device is at a speed lower than the present value.

Attention:

If both move alarm and speed alarm are triggered, the device will only send speed alarm.

10. Lack SD card space Alarm

Alarm indication: “SD card insufficient alarm, remains [vol]MB!!”

This alarm is always enabled if the SD card is available, and will be triggered when:

- the SD card remains less than 20MB.

When the alarm is triggered, it will be sent at an interval of 3 minutes, and can be

stopped when:

- the device receives a command of “mask”, or
- the SD card remains more than 20MB.

Attention:

The device support to communicate with a PC via a USB connection, with which the user can do some operations on the SD card when necessary, such as file copy, file deletion and so on.

11. Power Off Alarm

Alarm indication: “power off alarm!!”

This alarm is always enabled, and will be triggered when:

- the voltage of the backup battery is lower than 3.4V and no external power supply available .

This alarm will be sent only once, and the device will power off after sending out the alarm.

V. LED indicator status

LED Indicator	LED Status	
GSM LED (Green)	Flash fast,1S/times	Low power
	Flash slow,3S/times	Normal
	Green LED is on constantly	Searching for GSM network
GPRS LED（Red）	OFF	OFF GPRS
	Flash fast, 1S/times	GPRS Offline
	Flash slow, 3S/times	GPRS Contact
GPS LED （Blue）	OFF	GPS power down
	Flash fast,1S/times	Searching GPS signal
	Flash slow,3S/times	Get GPS signal

VI. Operation Suggestions

In order to extend the device life, please comply with the following instructions:

1. Keep the device dry. Any liquid, i.e. rain, moisture, may destroy or damage the inside circuitry.
2. Don’t use & store the device in dusty places.
3. Don’t put the device in overheated or overcooled places.
4. Handle carefully. Please don’t vibrate or shake it violently.
5. Clear the device with a piece of dry cloth. Don’t clean in chemicals, detergent.
6. Don’t paint the device, this may cause some foreign materials left in ports.

7. Don’t disassemble or refit the device.
8. Please read the user manual carefully before your installation and operation. Pay attention to the product’s working voltage range. Otherwise, it won’t work properly, or even worse, might be destroyed.

VII. Common Faults & Solutions

Faults	Solution
Startup Fail	(1) Check whether power/ground wires are correctly connected; (2) Turn off the tracker device and remove harness (3) Turn on the tracker.
Call Fail	(1) Check whether the GSM antenna is correctly connected; (2) Check whether SIM card is correctly inserted.; (3) Check up the power supply condition.
Hang up Fail	It’s usually happened when an unauthorized number dials up this device, in steady of authorized numbers. Please initialize the device and set up authorized numbers again.
Monitor Fail	Check whether authorized numbers have been set up correctly..
Location report always in digits of zeros.	Check whether the GPS antenna is correctly connected; Check whether the GPS antenna is put in right place